

# Robustel Cloud Manager Service (RCMS)

The next evolution of software delivery from Robustel



Robustel Cloud Manager Service (RCMS) is a modular IoT cloud software platform compatible with all Robustel products.

RCMS is designed from the ground-up to empower Robustel customers to build their IoT Solution(s) in a manner that is scalable, cost effective and can evolve quickly with the market.

Designed to work hand-in-hand with RobustOS, RCMS unlocks the true potential of Robustel products giving customers the ultimate range of monitoring, management and control functions.

With it's modular design RCMS enables new APPs to be added to the platform without interfering with core behavior, to create new functionality and allow for integration with third-party software.

Cloud Manager Service	RCMS Basic Included for all devices	RCMS Essentials \$1 USD per device / per month	RCMS Advanced \$3 USD per device / per month
Management Dashboard	<b>✓</b>	$\checkmark$	$\checkmark$
Device Status	<b>✓</b>	<b>✓</b>	$\checkmark$
Device Location (via GPS or Celltower)	$\checkmark$	$\checkmark$	$\checkmark$
Remote Syslog (Generate & Export)	<b>✓</b>	$\checkmark$	$\checkmark$
Device Alerts & Notifications	N/A	$\checkmark$	<b>✓</b>
Firmware Over-the-Air (OTA)	N/A	$\checkmark$	<b>✓</b>
RobustOS Apps Over-the-Air (OTA)	N/A	$\checkmark$	$\checkmark$
Device Config Over-the-Air (OTA)	N/A	$\checkmark$	<b>✓</b>
Remote Command Line (CLI) Access	N/A	<b>✓</b>	<b>✓</b>
Pre-Set Device Commands (Reboot, etc)	N/A	<b>\(\sigma\)</b>	<b>✓</b>
Device Templates (Zero Touch Config)	N/A	<b>\</b>	<b>✓</b>
RobustVPN Remote Device Access	N/A	N/A	<b>✓</b>
VPN Grouping and Access Control	N/A	N/A	<b>✓</b>
VPN Data Control & Management	N/A	N/A	<b>✓</b>
Bundled VPN Data	N/A	N/A	5GB per device / per month
Robustel Cloud Manager Service (RCMS) Features & Pricing Gui	ide   © Robustel		<b>⊘</b> robustel



# Empower your devices with Cloud Management



## **Monitor**

The RobustLink App inside RCMS gives you visibility of your entire Robustel device fleet in a single location from anywhere in the world. View device status, signal strength, data usage and WAN details for any device connected to the platform at the touch of a button

#### **Management Dashboard**

Total Devices Online/Offline | Devices by Connection Type | Total Devices by Group | Total Devices by Model | Total Devices by Cellular Carrier

#### **Individual Device Statistics**

Online/Offline Status | Connection Type & Link Details | Signal Strength | Data Usage | Location (GPS, Cellular or Manual) | Installed Apps & Firmware

#### Remote Syslog

Enable/Disable Syslog features remotely and export them for analysis

RobustLink

# Manage

Use the RobustLink App inside RCMS to access your devices remotely to change configuration parameters or send device commands through remote Command Line Interface (CLI) access. Maintain your fleet through Over-the-Air (OTA) updates for Firmware, Apps and Configuration files in bulk or for a single device.

### Over-the-Air (OTA) Updates

Update Firmware, RobustOS Apps and XML config files

#### Remote Command Line Interface (CLI)

Configure any device connected to RCMS using the CLI without the need for a fixed/addressable IP Address.

#### Remote Reboot

Remote actions allow you to automatically reboot a batch of devices or a single unit with the press of a button.



# Control

Use the RobustVPN App inside RCMS to create a virtual LAN for your devices that can be accessed securely from anywhere in the world using the preconfigured desktop VPN client.

### Access groups of devices through a single VPN

Configure VPN groups within RCMS to control the devices and users that are allowed to access your virtual network.

# **Controlled VPN Usage**

Use RCMS to control when your virtual network is available. Configure your VPN to be always available or only when needed to reduce network traffic.

## **VPN Traffic Logging**

VPN Traffic logs allow you to pinpoint problem devices quickly and efficiently.

**Email:** info@robustel.com | **Website:** www.robustel.com © Robustel Ltd 2019

All rights reserved | Subject to change without notice

#### 2 robustel RCMS Delivery Methods Customize your RCMS deployment to suit your business **Delivery Method** RCMS Cloud is a shared public cloud RCMS STACK is a private version of the Description deployment of RCMS available to all RCMS platform packaged and installed Robustel customers. in a customers environment. Hosted by the customer in their envi-Hosted by Robustel in partnership with **Environment** Microsoft Azure for enhanced scalability ronment of choice; Either a local server, and security options. physical data centre or cloud provider. Available Apps OPEX with tiered pricing per device CAPEX Set-up + Annual OPEX fee Price Model based on features required (Customer owns Infrastructure Cost) Custom APPs & Features available Custom APPs & Features available on Customization from APP Centre request Custom APP development available **OEM Software Development options** with restrictions available at cost Full RESTful API Full RESTful API **API** Access Free Read-Only basic access for all Custom URL & Destination Server **Benefits** Standardized Code Base updated customers No need for hosting or third-party regularly for security, bugs and new integration costs features. Standardized Code Base updated Data stored locally Ports can be restricted for 'Local regularly for security, bugs and new operation' Microsoft Azure Active Directory and Becomes more cost effective at IoT Hub Integration. high device volumes as long as Connected to the Robustel App infrastructure is maintained. Centre to send the latest firmware and RobustOS APPs directly to



devices.